

# **DYNAWATT<sup>®</sup>**

**230 V POWER SYSTEMS**

**5000**

**USER MANUAL**

**Installation  
&  
Operation**



## Congratulations

on your purchase of a DYNAWATT 230V POWER SYSTEM 5000. You have now acquired a high quality, precision-manufactured power supply system for mobile use. Please read these Operating Instructions through carefully before using the system for the first time.

In any event, installation should only be carried out by a qualified technical workshop.

Manufacturer: DYNAWATT AG  
Zinkereistrasse 35  
8633 Wolfhausen  
Switzerland  
Tel: +41-55-253 26 00  
Fax: +41-55-253 26 09  
[www.dynawatt.ch](http://www.dynawatt.ch)

## SYSTEM DATA

The DYNAWATT 230V Power System consists of three parts. They are:

1. Generator	Figure 1	Page: 20
2. Control unit	Figure 2	Page: 21
3. Remote control	Figure 3	Page: 22 (option)

## SAFETY PRECAUTIONS

- The DYNAWATT Power System 5000 generates an output voltage of 230V AC. When operating the system please therefore observe the general safety regulations for using electrical equipment. In other words e.g. do not allow any liquids to get into the housing, do not use any sharp instruments, in particular do not insert any metallic objects into the ventilation slot!
- The system is electrically insulated (galvanic separation between electronics and housing) and is not earthed to the chassis. (IT mains installation with potential compensation)
- When the engine is running the circuits are live. In order to ensure optimum cooling the unit must be installed vertically and the ventilation slots kept clear.
- All installation screws (installation kit) must be secured to prevent accidental loosening by using Loctite.

### IMPORTANT

Installation and maintenance of the system should only be carried out by trained personnel. Any faults which are attributable to the use of components other than the components supplied by DYNAWATT AG, or the failure to observe the safety instructions as specified above, are not covered by the warranty.

A Power Transfer Switch must be installed if the vehicle (boat etc.) can also be connected to other power sources e.g. 230V external power (shore power), generator, inverter etc. Failure to comply with this instruction will cause damage to the control unit, this damage is not covered by the guarantee. Power Transfer Switches are available from DYNAWATT as an option.

## INDEX OF CONTENTS

<b>SYSTEM DATA</b>	<b>3</b>
<b>SAFETY PRECAUTIONS</b>	<b>3</b>
<b>INDEX OF CONTENTS</b>	<b>4</b>
<b>LIST OF FIGURES</b>	<b>6</b>
<b>TECHNICAL SPECIFICATION</b>	<b>7</b>
CONTROL UNIT	7
GENERATOR	7
<b>ADDITIONAL COMPONENTS</b>	<b>8</b>
REMOTE CONTROL	8
POWER TRANSFER SWITCH	8
<b>LIST OF PARTS SUPPLIED</b>	<b>8</b>
<b>PARTS REQUIRED, NOT SUPPLIED</b>	<b>8</b>
<b>GENERATOR SPEED AND AVAILABLE POWER</b>	<b>9</b>
GENERATOR SPEED	9
AVIABLE OUTPUTS IN WATTS	9
<b>INTRODUCTION</b>	<b>10</b>
<b>MANUAL CONTENT</b>	<b>10</b>
<b>SYSTEM DESCRIPTION</b>	<b>10</b>
GENERATOR AND CONTROL UNIT	10
REMOTE CONTROL	10
POWER TRANSFER SWITCH	10
<b>OPERATION</b>	<b>11</b>
ENGINE SPEED	11
OVERLOAD	11
START PHASE	11
REMOTE CONTROL (OPTION)	12
OFF	12
ON	12
INCREASE SPEED	12
OVERLOAD	12
UNDERVOLTAGE	12
SHORT CIRCUIT	13
SYSTEM ON AND OFF	13

<b>PERIODIC MAINTENANCE</b>	<b>13</b>
GENERATOR DRIVE BELT	13
GENERATOR BEARINGS AND BRUSHES	13
<b>INSTALLATION GUIDELINES AND SAFETY PRECAUTIONS</b>	<b>14</b>
<b>GENERATOR</b>	<b>14</b>
INSTALLATION SITE	14
CHOICE OF BELT PULLEY	14
CHOICE OF BELT PULLEY	15
BELT PULLEY ALIGNMENT	15
<b>INSTALLATION</b>	<b>16</b>
GENERATOR INSTALLATION	16
FITTING THE GENERATOR COVER	16
GENERATOR MAGNETIZATION	16
CONTROLLING RPM OF VECHICLES ENGINE	16
CONTROL UNIT MOUNTING	17
CONNECTION THE GENERATOR CABLE	17
230V CONNECTION	17
<b>STARTING THE SYSTEM</b>	<b>18</b>
<b>TROUBLESHOOTING</b>	<b>18</b>
<b>TESTING THE GENERATOR</b>	<b>18</b>
<b>WARRANTY TERMS</b>	<b>19</b>
<b>FIGURES</b>	<b>20–29</b>

## LIST OF FIGURES

All figures can be found at the back of the manual, listed in the order of the figure numbers.

<u>Figure</u>	<u>Page</u>	<u>Description</u>
1	20	Generator
2	21	Control Unit, Generator and 230V Connection Terminals
3	22	Remote Control
4	23	Generator Performance Curve
5	24	Generator Magnetization
6	25	Preparing the Connection Cable
7	26	Power Transfer Switch
8	27	Control Unit Installation
9	28	Generator Installation
10	29	System Block Diagramm

## TECHNICAL SPECIFICATION

### CONTROL UNIT

Output voltage:	230V .AC $\pm$ 5%	
Phases:	1 phase	
Transformation:	250V by the generator to 230V	
Frequency:	50 Hz $\pm$ 0.05%	
Output wave:	sine wave	
Output power:	5000 VA intermittent @ 6000rpm generator 4800 VA continuous (25° C temp.)	
Start-up current:	70 Amp (5ms)	
Efficiency:	96%	
Weight:	8.5 kg	
Protection category:	IP 21	
System Protection:	System automatically shuts of by: overheating, short circuit (double fault), overload, undervoltage.	
Dimensions:	See Figure 1	

### GENERATOR

Power output:		max. 5300 Watt (25° C temp.)	
Output voltage:		3 x 250V AC	
Output frequency:		variable, from 300 Hz to 1500 Hz	
Generator speed:		13,000 rpm continuous	
Weight:		7.5 kg	
Belt pulley:		DIA 60mm, 2 x 9,5mm belt	
Efficiency:		70%	
Insulation category:		H (180°)	
Phase resistance:		2.4 Ohm $\pm$ 0.3 (from phase to phase)	
Resistance rotor:		2.5 to 3.5 Ohm	
Dimensions:		See Figure 2	
Cable:		5 X 2.5mm <sup>2</sup> , 10m (max. 20m on request)	

## ADDITIONAL COMPONENTS

### REMOTE CONTROL

Switch:		ON / OFF	
Indicators		add rpm, overload, overheating, short circuit	
Connection cable length:		7,5m available, (max. 20m on request.)	
Dimensions:		See Figure 3	

### POWER TRANSFER SWITCH

A Power Transfer Switch must be installed for switching over from an external power source (e.g. shore power 230V) to on board power source, DYNAWATT. Fig. 7.

## LIST OF PARTS SUPPLIED

1. Generator is supplied with 10m, 5 x 2.5mm<sup>2</sup> cable
2. Control unit
  - a. 2 pc. attachment brackets (loose)
  - b. 4 pc. M6 x 10mm attachment screws for brackets (on the back of Control Unit)
  - c. EMI fitting for the generator cable (on the front side of CU)
  - d. Fitting for the 230V cable (on the front side of CU)
3. Remote control with 7,5m cable(available as an option)
4. User manual

## PARTS REQUIRED, NOT SUPPLIED

1. Three-conductor Output power cable, min. 3x2.5mm<sup>2</sup>
2. Vehicle-specific installation sets available on request.
3. 4 pc. attachment screws for the Control Unit

## GENERATOR SPEED AND AVAILABLE POWER

### CALCULATIONS SHEET

(Note: Measure the belt pulley external diameter)

### GENERATOR SPEED

Belt pulley dia. generator side:  $R_a = \dots\dots\dots$  mm  
Belt pulley dia. motor side:  $R_m = \dots\dots\dots$  mm  
Motor speed idling:  $n_L = \dots\dots\dots$  rpm  
Motor speed max.:  $n_M = \dots\dots\dots$  rpm  
Belt pulley transmission:  $i_R = R_m : R_a = \dots\dots\dots$   
Generator idling rpm:  $NA_{\text{idling}} = (i_R) \times (n_L) = \dots\dots\dots$  rpm  
Generator max. rpm:  $NA_{\text{max}} = (i_R) \times (n_M) = \dots\dots\dots$  rpm

### AVIABLE OUTPUTS IN WATTS

Read from the Curve of Figure 4

Power at engine idle speed ( $NA_{\text{idling}}$ )  $\dots\dots\dots$  Watt  
Minimum speed for full load  $\dots\dots\dots$  rpm

## INTRODUCTION

## MANUAL CONTENT

This manual covers: Operating Instructions, Installation Guidelines and Installation Instructions.

## SYSTEM DESCRIPTION

### GENERATOR AND CONTROL UNIT

The system consists of a high performance generator which is belt-driven by the main engine and controlled by the control unit. Whenever the engine is running, a precisely controlled 230V power source with 50 Hz sine wave AC is available, just turn the ON/OFF switch to ON.

### REMOTE CONTROL

The remote control provides a power **ON** / **OFF** switch and has 4 LED status and fault indicators.

### POWER TRANSFER SWITCH

A Power Transfer Switch is required for switching between an external power source (230V mains) and the DYNAWATT Power System.

### WARNING

**Voltage must never be connected to the control unit! Return voltage will immediately result in the control unit being damaged!!**

**NO WARRANTY**

## OPERATION

Figure 4. At full power the system delivers 5000 Watts AC and can deliver higher peak output on a temporary basis. However, the system automatically limits the output power in case of overload. Overload causes the output voltage to drop, this can have a negative affect on the applied loads. This chapter explains how the user can avoid this situation arising. It deals with four areas.

1. Motor speed
2. Overload
3. Start phase
4. Remote control

### ENGINE SPEED

At idling speed the generator delivers a percentage of its potential output. Generation of the maximum output requires a higher engine speed. Figure 4 shows a performance curve for calculating the drive ratio, the output available from the system on idling speed and the minimum engine speed required in order to achieve the system's maximum output.

### OVERLOAD

With most overload situations there are three adjustment options.

1. Reduce the electrical load
2. Increase the motor speed slightly
3. Shut off the entire power consumption temporarily by switching off the control unit or switching to OFF on the remote control. The load must then be reduced or the motor speed first increased.

### START PHASE

Electrical consumers (in particular electric motors) take up far more current when they are switched on than when in operation. The DYNAWATT 5000 delivers up to 70 amps starting current. In some situations the user will have to follow the start-up procedure as explained below:

1. Switch off all loads
2. Switch on the largest load first
3. Switch on the remaining small loads.

If the starting current for a load is too high then a soft start can be connected between the DYNAWATT and the user. The Dynawatt soft start reduces the starting current by up to 70% by electronically slowing down the start-up speed of the load. This enables motors with considerably higher starting currents to be operated.

## REMOTE CONTROL (OPTION)

### OFF

The system is switched to 'OFF' by pressing the toggle switch. In this state there is no voltage on the Output and the 'OFF' LED light comes on.

### ON

Pressing the toggle switch to 'ON' activates the system. The 'ON' LED light comes on if the system is switched on.

#### NOTE

**The control units main switch must be set to ON if the remote control is used. Otherwise it will not function.**

## INCREASE SPEED

The control unit continuously measures the power output. If the voltage falls by more than 5% under load or because the generator speed is too slow, with the result that the power output is no longer sufficient for the current level of consumption, then the control unit increases the magnetising voltage. Once this reaches the maximum of 14V and the voltage generated is still below 210V then the 'ADD RPM' LED light comes on.

**Remedy:**

- Increase engine speed
- Check belt tension for slippage, tighten or replace belt

## OVERLOAD

Under overload the current limiter limits the output current to 22,5 amps, the 'OVERLOAD' LED will come on, Output Voltage will drop depending on the overload. The system can however still be operated without any problem. CAUSON have to be taken in order not to affect loads applied. Some appliances may be damaged by undervoltage!

If there is a sudden heavy load increase the system automatically shuts off and the 'SHORT CIRCUIT' LED light comes on.

**Remedy:** Reduce the load, switch the system ON.

## UNDERVOLTAGE

Overload or low generator speed causes voltage reduction. When voltage has been below 190VAC over 10 seconds system shuts off automatically and 'OVERLOAD' LED light blinks.

**Remedy:** Reduce the load, switch the system ON.

## HIGH TEMPERATURE    Overheating

A continuously high load or an overload can cause the system to overheat. If the system reaches a temperature of **62°C** the 'HIGH TEMPERATURE' LED **light starts to flash**. At **65°C** the system automatically **shuts off**. The system only switches back on automatically once it has cooled down to 52°C.

The cause of the overheating can be either incorrect installation, inadequate cooling or a defective fan.

**Remedy:**

- Check that the Control unit is well ventilated.
- Test the fan operation
- If a suction filter is used the filter may need to be cleaned.

## SHORT CIRCUIT

In the event of a short circuit or a high load (>70 amps) the control unit automatically switches off and the 'SHORT CIRCUIT' LED light comes on.

**Remedy:**

- Switch off the unit, reduce load or correct the fault.
- Then switch the unit back ON again. (*The system does not switch back on automatically after a short circuit.*)

## SYSTEM ON AND OFF

If the system has been turned off by engine shut down the ON / OFF switch must be rest to off and on again, otherwise the system will not start.

## PERIODIC MAINTENANCE

### GENERATOR DRIVE BELT

The system does not need any periodic maintenance with the exception of checking the belts which are used to drive the generator. We strongly recommend purchasing replacement belts. Generator drive belts should be checked at every periodical engine maintenance. Its recommended to check the belts and tension every 10 000 km and/or 200-250 enginehours and belts replaced if necessary. Where a twin belt system is used both belts must be replaced simultaneously. **Only high performance belts should be used, such as e.g. GATES Type ESC or CONTI Industry.**

#### NOTE

**A new B-belt will expand during the first hours of operation and the tension must therefore be subsequently adjusted after the first 10 hours.**

### GENERATOR BEARINGS AND BRUSHES

Depending upon the load and the extent to which the system is used the brushes and bearings should be replaced after approx. 1000 hrs or 80,000 km. Please contact your nearest DYNAWATT dealer for replacements.

## INSTALLATION GUIDELINES AND SAFETY PRECAUTIONS

### IMPORTANT

It is essential for the system to be installed professionally to ensure reliable operation over a long period of time. The mechanical installation of the generator is of particular importance. In the event of any problems occurring please contact your DYNAWATT dealer.

### GENERATOR

A number of factors must be taken into account to ensure the generator is correctly installed. Particular attention must be paid to the correct selection criteria.

1. Installation site and stability
2. Choice of belt pulley for the right speed range
3. Choice of belt for minimum system maintenance
4. Belt positioning, alignment and tension.

### INSTALLATION SITE

The generator can:

1. be fitted to the engine block as an addition to the existing alternator
2. be fitted next to the engine. This requires a special, automatic belt tensioner which is available as an accessory.
3. Whichever choice you make it is essential for the generator to be installed securely.

### INFORMATION

The generator cable should be laid in a separate protective conduit to safeguard it from mechanical effects.

### CHOICE OF BELT PULLEY

See Figure 4; System Performance curve. The curve shows that no output is delivered by the system until the generator speed reaches approx. 2900 rpm. and the system generates a 50% output at a generator speed of approx. 3700 rpm.

To achieve the best results the system should reach a minimum generator speed of 3500 rpm at engine idle

**Generator maximum speed:** 13,000 rpm continuous  
15,000 rpm maximum

## CHOICE OF BELT PULLEY

The power which is transferred via the belts depends upon the belt width, wrap-around angle, the number of belts and the belt tension. The service life of a single belt system is considerably less than that of a twin belt system.

<b>DIA pulley</b>	<b>Belt size</b>	<b>Type</b>	<b>Qty</b>	<b>Max. output</b>
65 mm	12.5mm	12.5 ESC toothed	1	3000 Watt
<b>60 mm</b>	<b>9.5mm</b>	<b>9.5 ESC toothed</b>	<b>2</b>	<b>5000 Watt</b>
65 mm	12.5mm	12.5 ESC toothed	2	>5000 Watt
50 mm	Micro-V	Micro-V 6 grooved	1	5000 Watt

## BELT PULLEY ALIGNMENT

Nothing is more important for the service life of a belt than the alignment of the generator pulley and engine pulley. Both pulleys must be absolutely parallel and flush aligned. If a pulley is positioned at an angle to or slightly behind the other this can lead at least to a material related reduction in the useful life of the belt. In addition the belt may slip out of the grooves.

## INSTALLATION

### GENERATOR INSTALLATION

Figure 8. The generator is fitted as an additional alternator. It must be securely and permanently installed since the drive takes two to three times more power than factory-fitted standard alternator. The ratio to be taken into account during installation is dependent upon the engine idling speed and the maximum speed.

#### NOTE

**All installation screws must therefore be secured using Loctite to prevent accidentally working loose.**

### FITTING THE GENERATOR COVER

The generator cover must be positioned in such a way that the generator is able to take in dry, cool air via the intake opening (DIA. 55 mm). If this is not possible then a **suction hose must be connected to the opening** to provide dry, cool air and must be fitted in an appropriate position in the vehicle. The higher the air intake temperature the greater the heat related loss of generator performance. See Figure 9.

### GENERATOR MAGNETIZATION

**The generator must be magnetized before installing it otherwise the system may not operate at all.**

Input 12 volt from battery to generator's brushes **black cable-4 (+) plus** and **yellow/green cable (-) minus** for approx. 5 seconds. See Figure 5.

#### WARNING

**On no account must this be carried out while the engine is running and the Control Unit connected. The Control Unit will be immediately damaged by high voltage. NO WARRANTY**

### CONTROLLING RPM OF VEHICLES ENGINE

To increase idle motion of Engine recommended throttle or automatic rotation speed regulator.

## CONTROL UNIT MOUNTING

The control unit is to be installed in a well ventilated, dry place with average temperature levels. See Figure 8. The ideal position is against a wall, cable connections at the bottom. For this the two brackets, supplied separately, are screw connected to the rear of the control unit. ***The control unit must be installed upright position***, it is important to ensure that the air outlet slots on the reverse are not blocked.

### WARNING

The brackets must only be fitted to the rear of the Control Unit by using the supplied M6 screws, with a **maximum length of 10 mm**.

## CONNECTION THE GENERATOR CABLE

The five conductor generator cable has to be prepared as shown in Figure 6. Open the front cover of the control unit (undo 3 screws) and insert the cable into the housing through the metal fitting. Lead the numbered cables (1-5) to the correct terminal number and attach. To attach the cable press the terminal clamp down by using a small screwdriver. Ensure the cables are securely clamped. The cable shield mesh is fitted as shown in Figure 6. Then gently tighten the screw connection using an SW 30 mm spanner. Make sure that the gen.cable is not turning around while tightening.

Cable function:	No.	Function	Terminal No.	Voltage
	1	1st Phase	L (1)	250V AC
	2	2nd Phase	L (2)	250V AC
	3	3rd Phase	L (3)	250V AC
	4	(+) Magnetizing current	+ (4) red	+12V DC
	5	(-) Magnetizing current	- (5) blue	- 12V DC

## 230V CONNECTION

Prepare cable as shown in Figure 6 and pull it through the plastic screw connection into the Control Unit. Attach cable to the output filter terminal clamp. Ensure secure fit. Minimum recommended cable size: 3 x 2.5mm<sup>2</sup>. (Cable up to 4mm<sup>2</sup> possible)

230V connection terminal function:	Terminal No.	Function	Cable colour
	L	Phase	Brown
	N	Neutral	Blue
	E	Earth	Yellow/Green

## STARTING THE SYSTEM

The following must be checked before starting the system:

- that the generator cable has been correctly installed
- that the B-belt tension has been correctly set
- that all installation screws have been tightened
- that the cables have been connected to the correct terminals and are securely clamped.
- when unit is switched ON, check if fan is operating

## TROUBLESHOOTING

The system doesn't work	Check the condition and tension of the B-belts. Check the cable and terminal connections.
LEDs on the remote control faint but no power	Check to see whether cable 4 (+) and 5 (-) have been connected the wrong way around or whether generator must be magnetized again . See Page 14.
Increase Speed Light comes on	B-belt slipping, check tension and condition, adjust tension.

## TESTING THE GENERATOR

With generator turning:	250V AC must be measured on the terminal from phase to phase (1-2-3). <b>(Warning, high voltage)</b>
With generator stationary:	The resistance on the terminal from phase to phase (1-2-3) must be between 2,4 ohms $\pm$ 0.5.
If fault displayed:	Contact supplier
Rotor resistance:	2.5 to 3.5 ohms between cable no. 4 (+) and 5 (-)
If fault displayed:	<ul style="list-style-type: none"><li>- Check generator carbon brushes</li><li>- Clean collector ring with fine sandpaper if necessary</li></ul>

## WARRANTY TERMS

1. The system is guaranteed for material and production defects. The warranty only covers the unit itself and not any consequential damage. The warranty application form, containing adequate information, must be sent to the vendor.
2. The warranty period extends for 12 months from the date of purchase by the first purchaser.
3. The system must be used and installed in accordance with the details contained in these Operating Instructions.
4. The warranty does not cover:
  - faults and repair costs caused as a result of improper use, modifications or incorrect installation
  - injuries and indirect damage to vehicles etc.
  - consequential costs and costs incurred due to loss of vehicle
  - moving parts such as B-belts, LED's, plastic components etc.
5. The warranty application must be submitted within a reasonable period of time, if possible within 14 days following the occurrence of the damage. The applicant must provide appropriate evidence to show when and where the system was purchased.
6. Despatch costs, installation and dismantling costs are to be borne by the applicant unless expressly agreed otherwise.

Figure 1: Generator

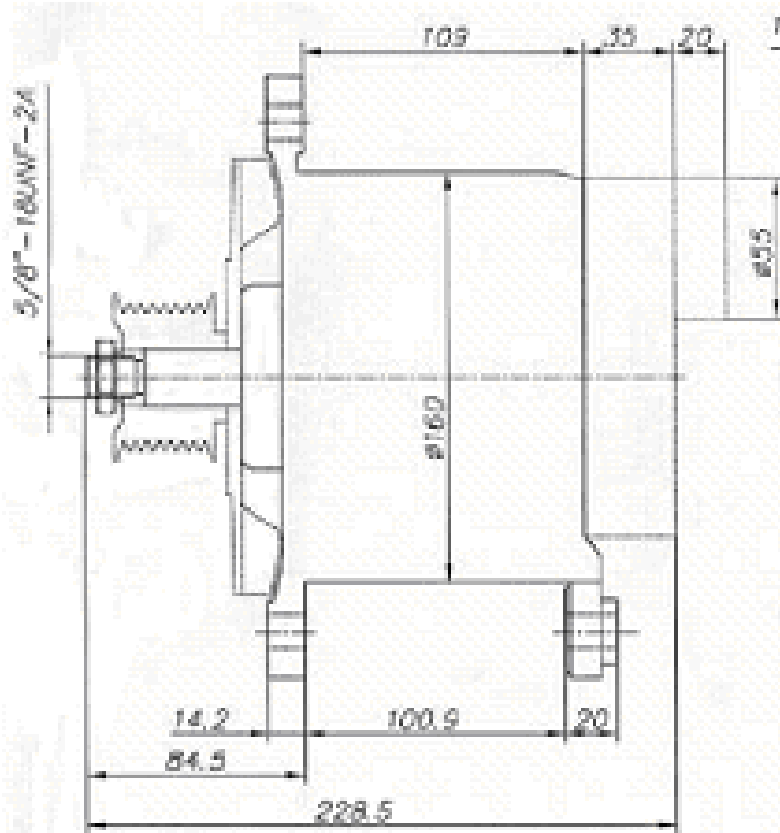
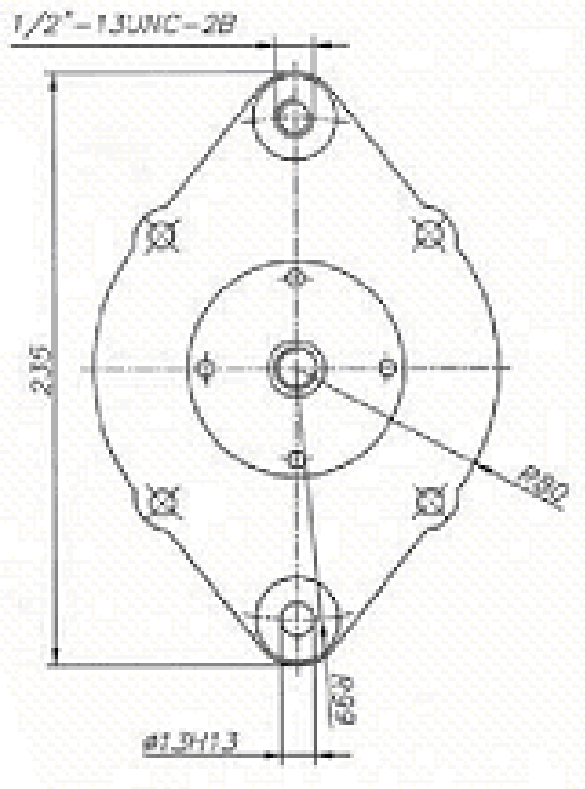


Figure 2: Control unit

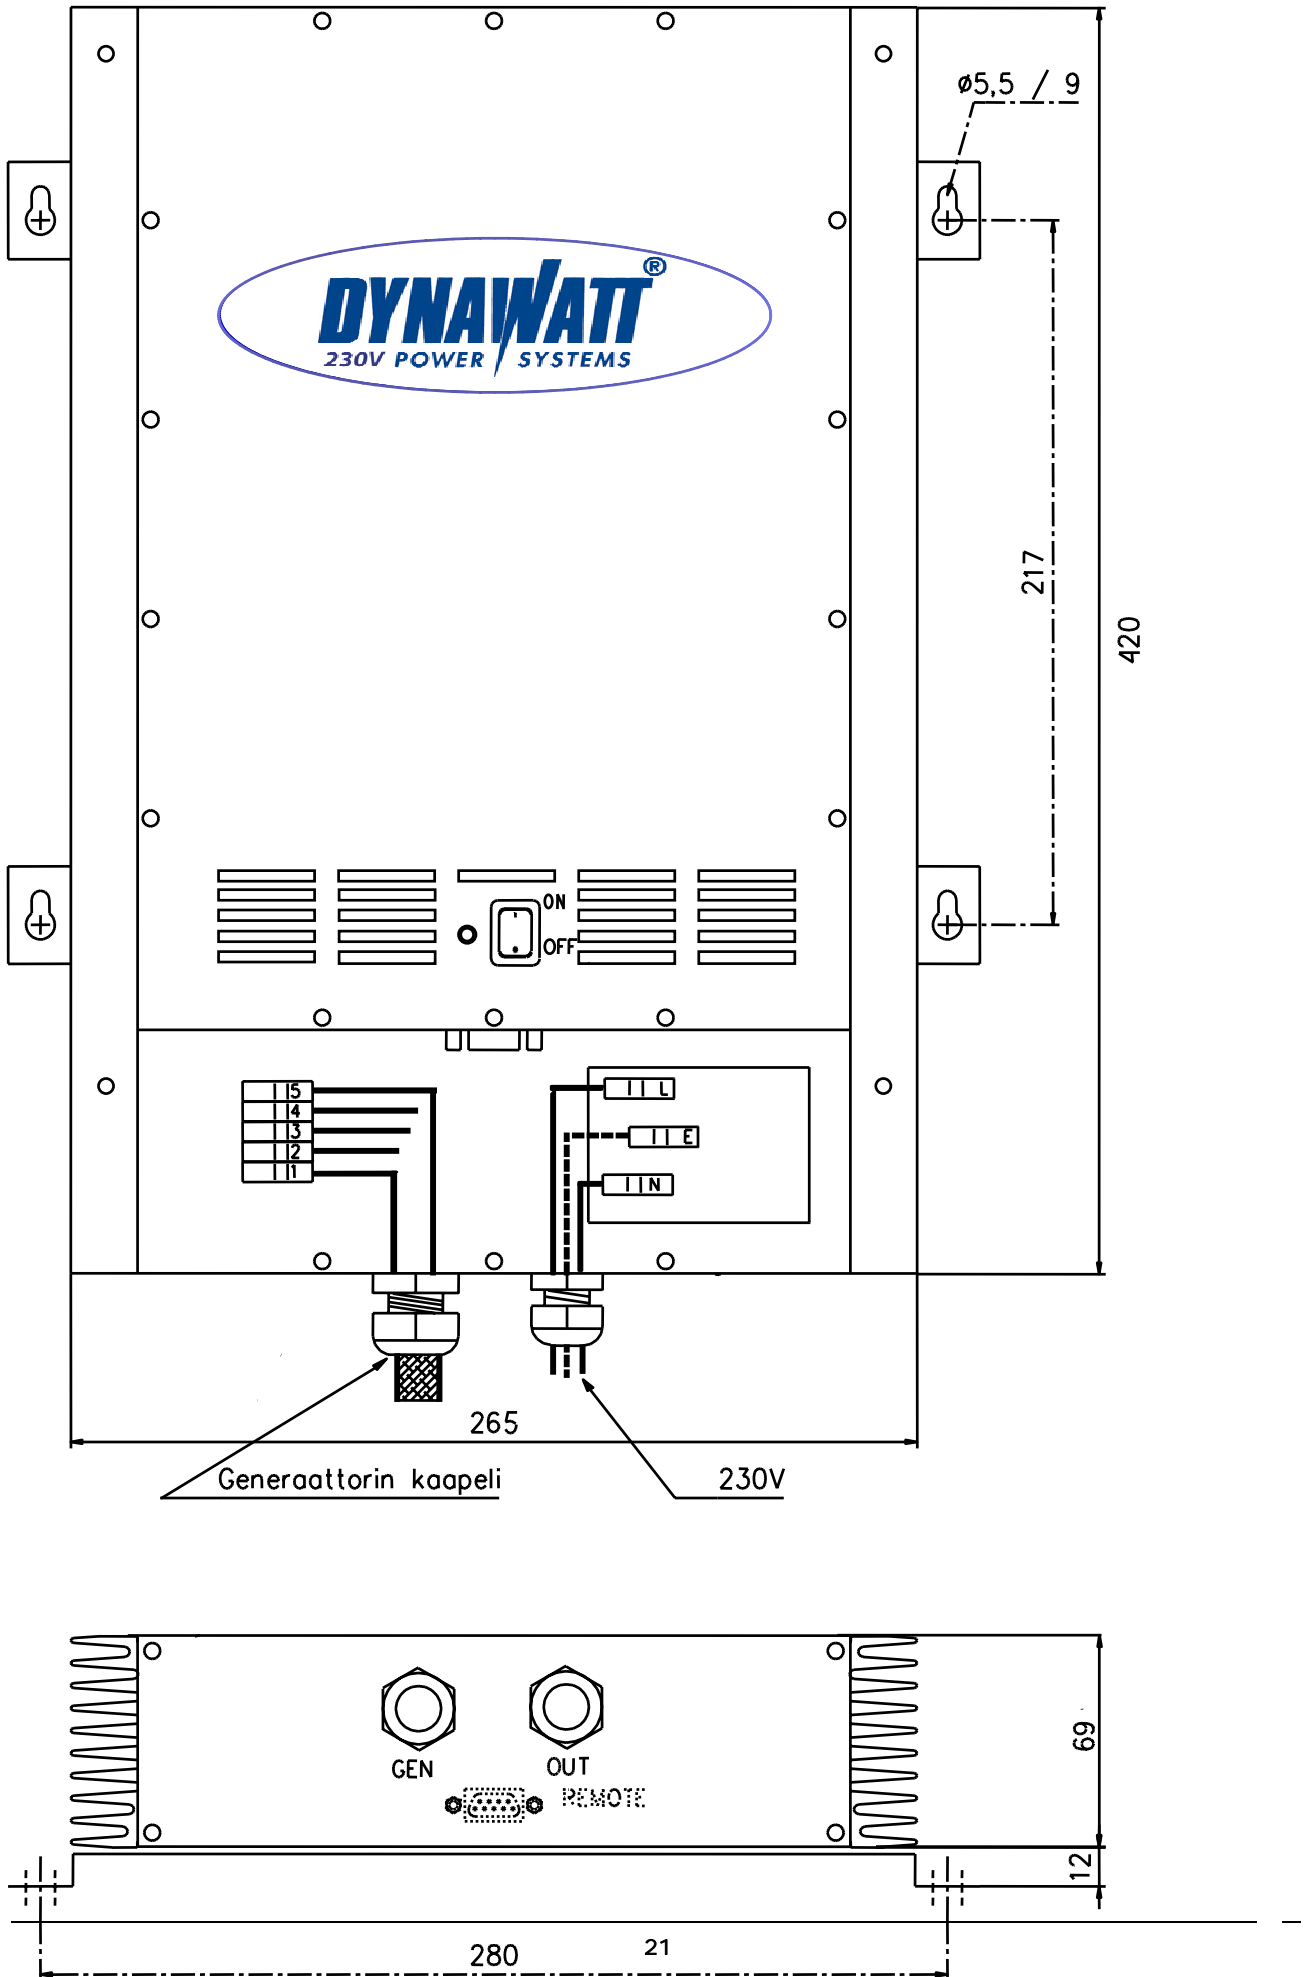


Figure 3: Remote Control

Cable No.				new cable
SUB -D PIN				
9	SC	⊖	white	black
7	SW	⊖	green	purple
6	HT	⊖	yellow	blue
5	V+	⊖	orange	green
4	AR	⊖	Red	yellow
2	OL	⊖	Braun	red
1	GND	⊖	black	braun

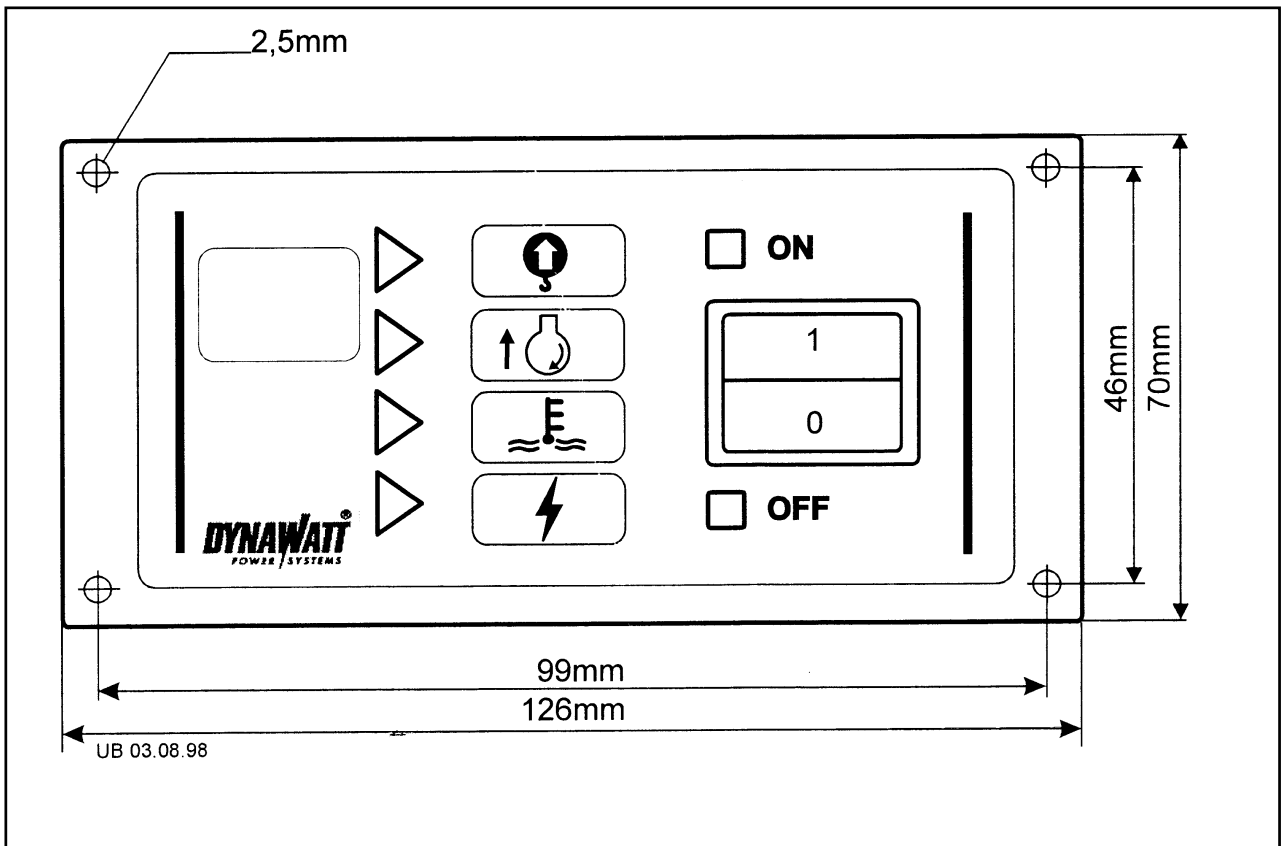


Figure 4: Generator Performance Curve


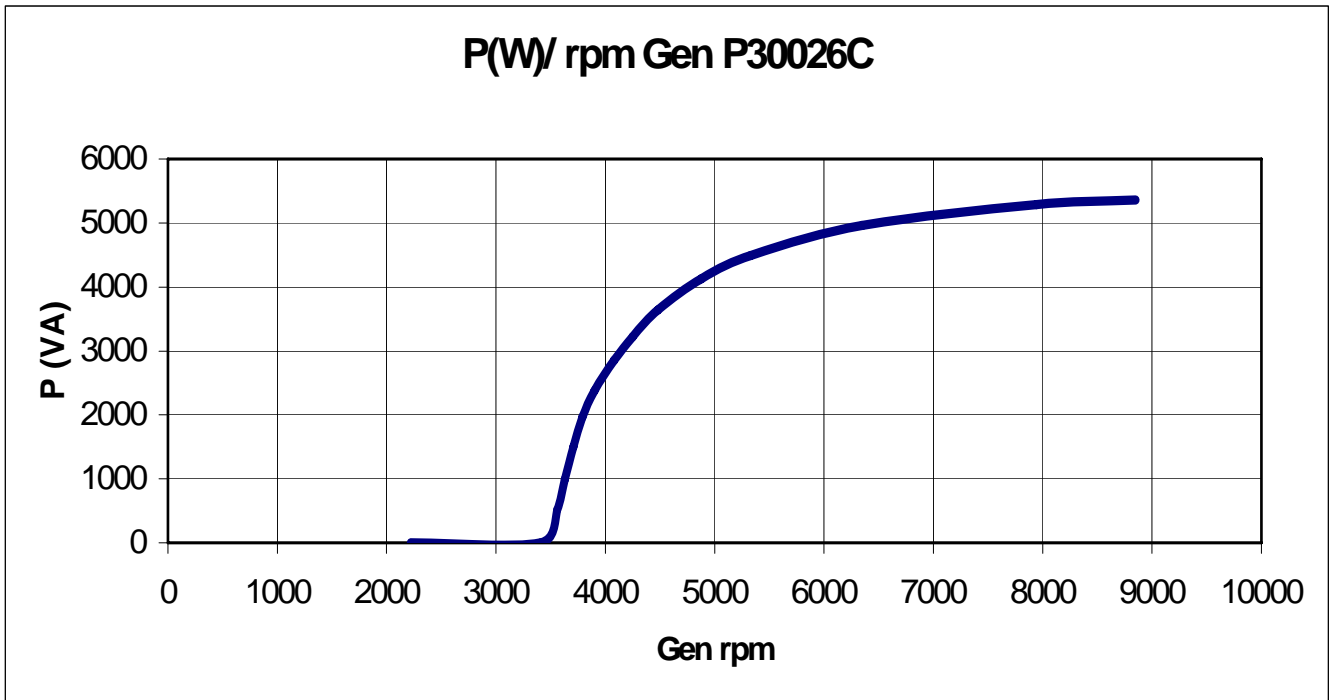


Figure 5: Generator Magnetization

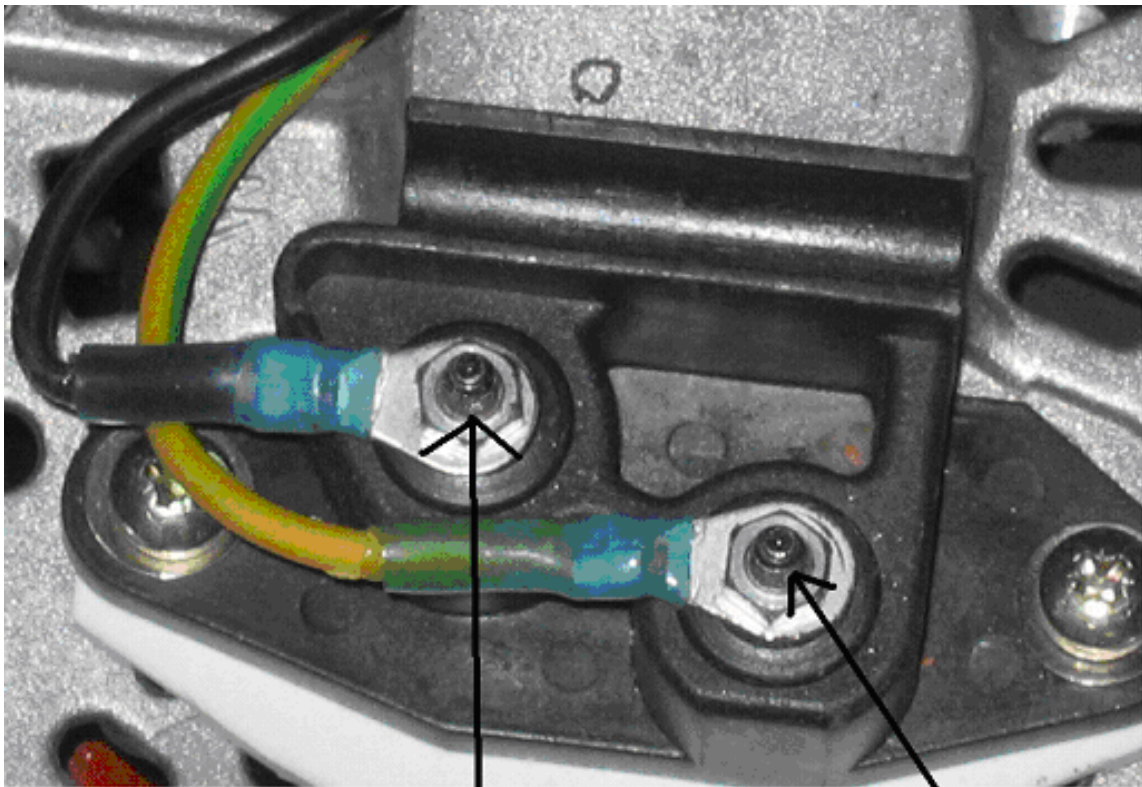


(+) Plus  
**Black cable**

**12 V DC  
~4A**

(-) Minus  
**Yellow-Green Cable**

Figure 6: Preparing cables

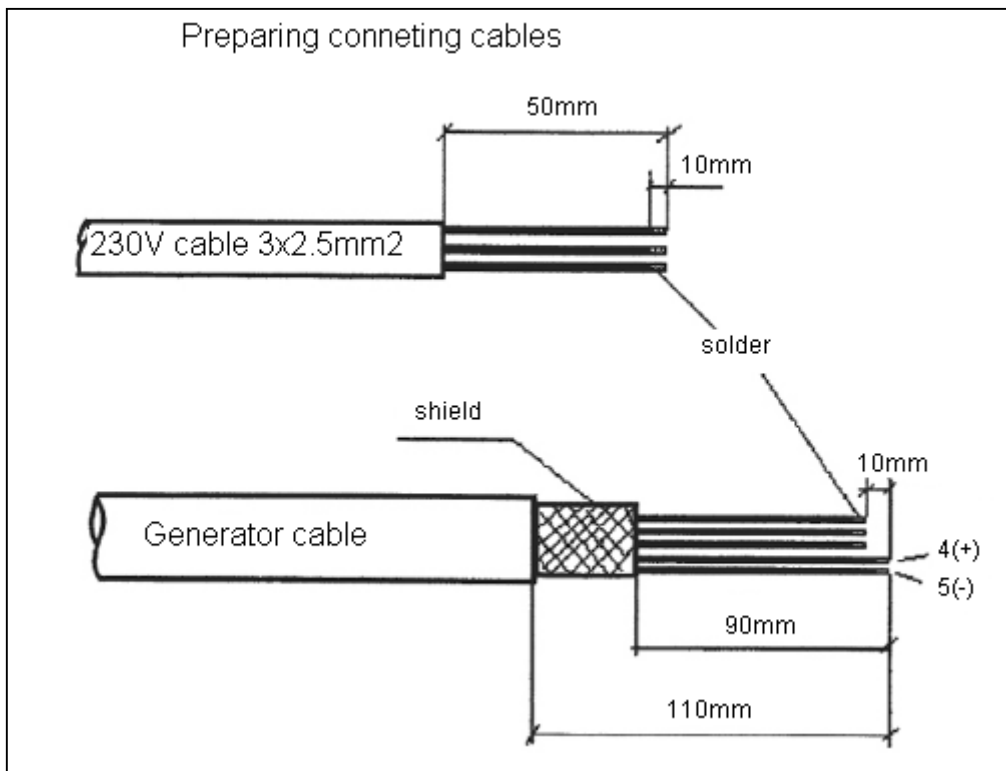

How to assemble EMI cable holder

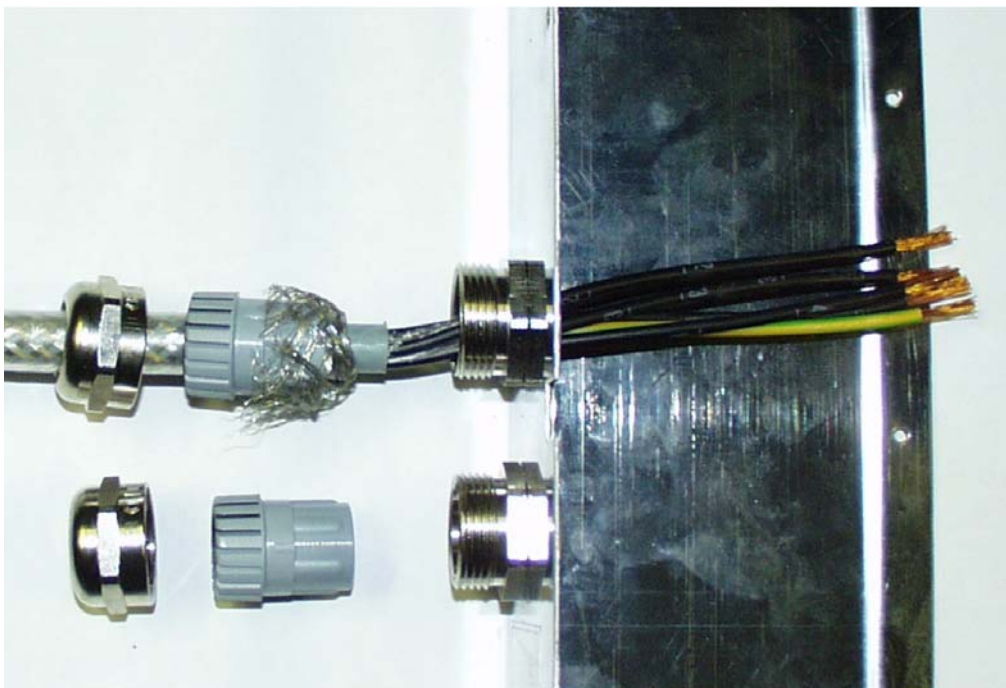


Figure 7: Power Transfer Switch

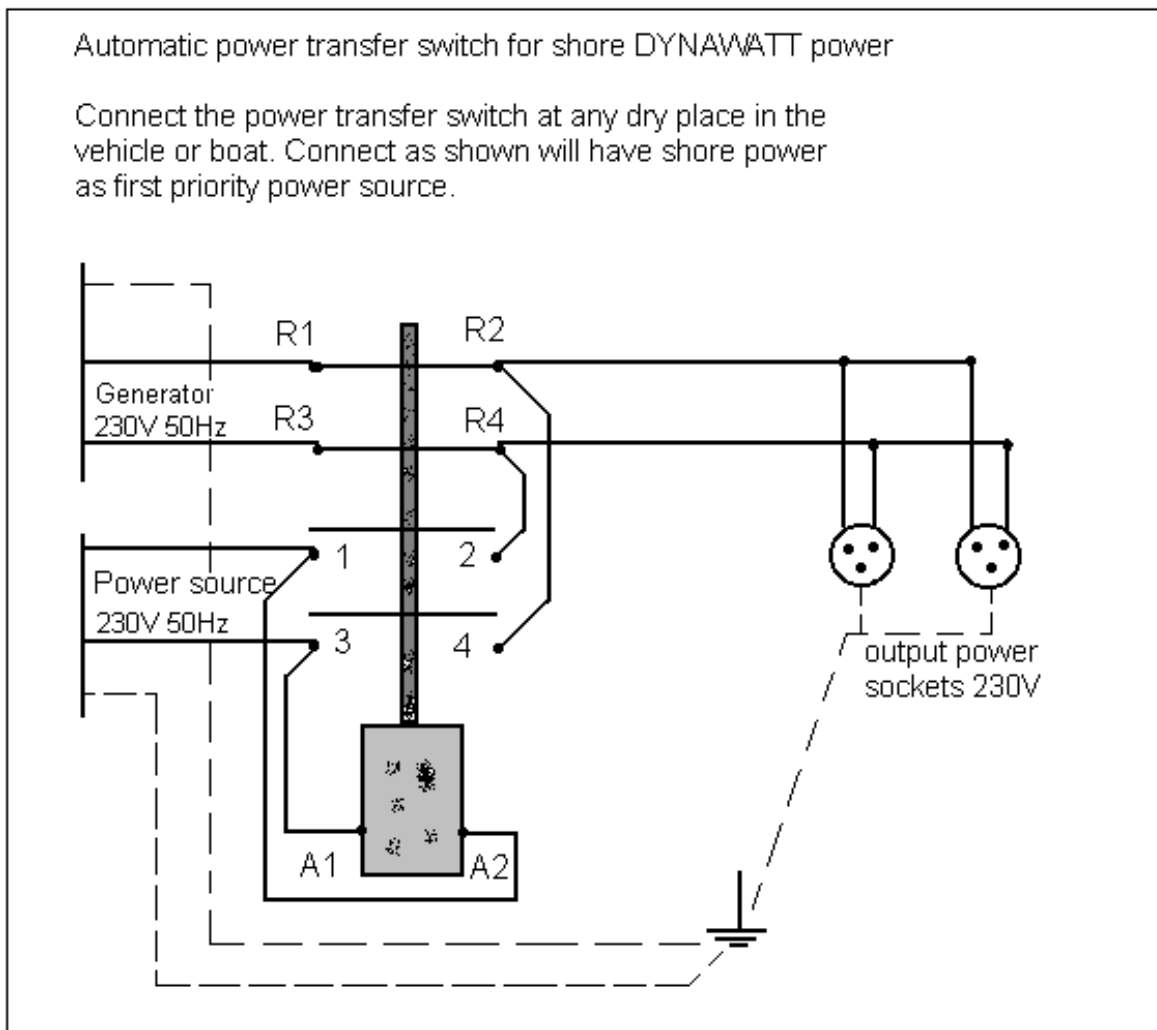


Figure 8: Control Unit Installation

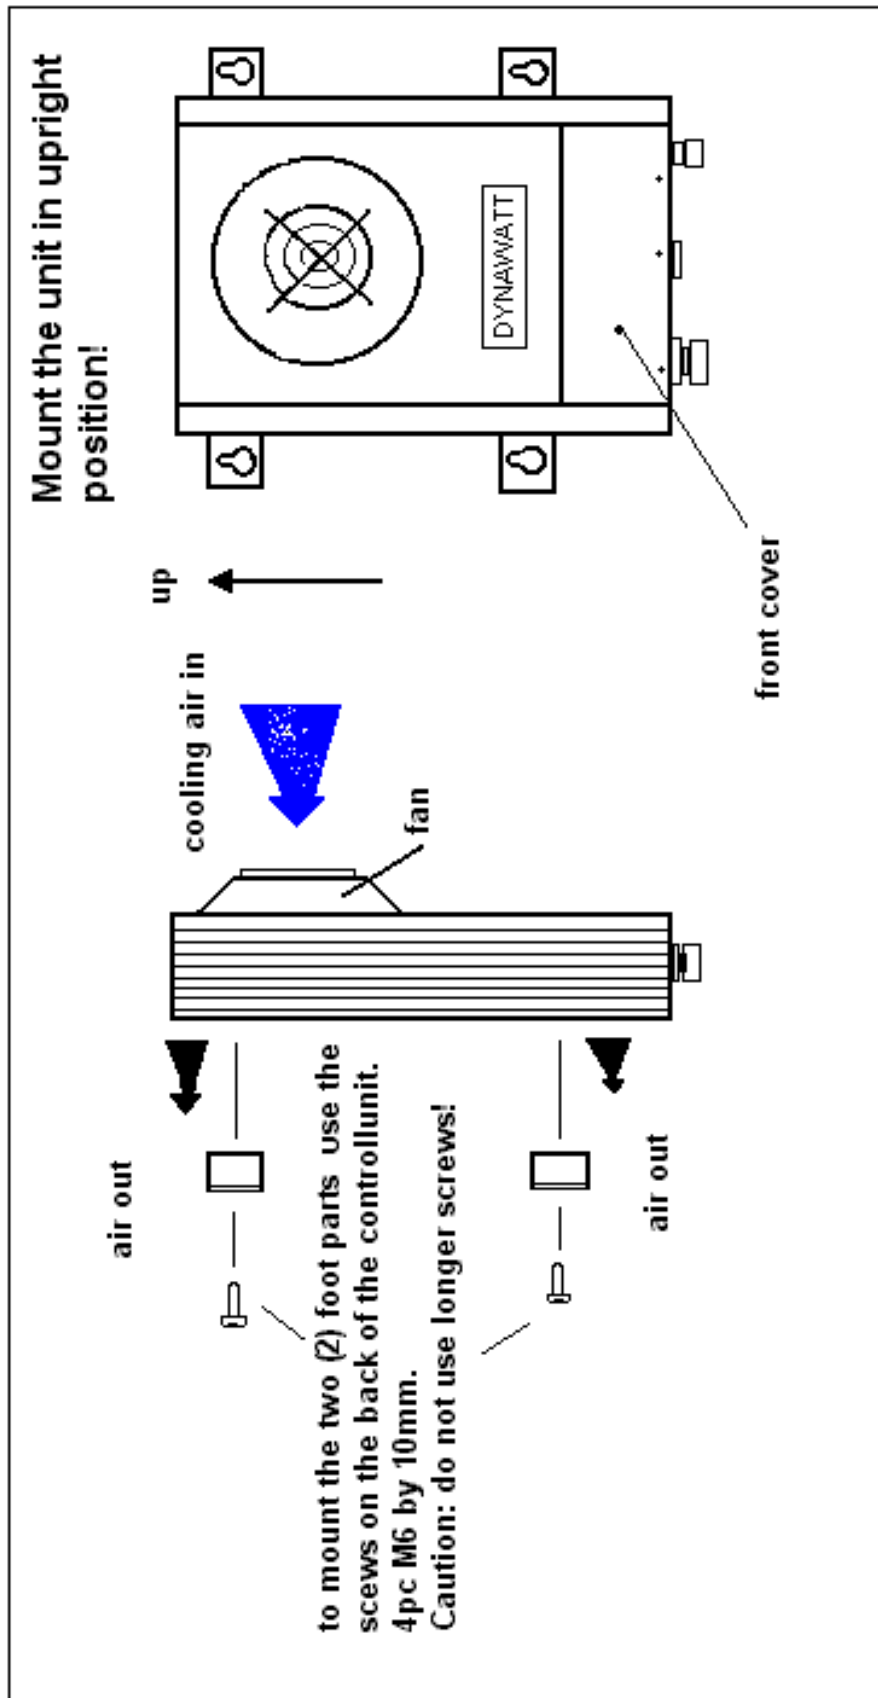


Figure 9:



Generator Installation with 2x9,5mm B-belts



Generator with DIA 55mm air intake hose (recommended max. length 60cm)  
Cut any place at the rear cover for gen.cable exit

Figure 10: System Block Diagramm

